



TRUCK TYRE BALANCING BEADS PORTION TABLE:

Tyre size	Portion (g)	Portion (ml)	Tyre size	Portion (g)	Portion (ml)
15" tyres			385/65R19.5	750	350
31/10.50R15	250	125	445/65R19.5	900	425
33/10.50R15	400	175	22.5" tyres		
33/12.50R15	400	175	235/80R22.5	750	350
16" tyres			255/80R22.5	750	350
215/85R16	200	100	275/80R22.5	750	350
225/85R16	200	100	295/80R22.5	900	425
235/85R16	200	100	315/80R22.5	900	425
245/85R16	200	100	365/80R22.5	900	425
255/85R16	250	125	245/75R22.5	750	350
265/85R16	250	125	265/75R22.5	750	350
31/12.50R16	400	175	285/75R22.5	750	350
33/12.50R16	400	175	295/75R22.5	900	425
35/12.50R16	400	175	315/75R22.5	900	425
17.5" tyres			345/75R22.5	900	425
205/75R17.5	400	175	350/75R22.5	900	425
215/75R17.5	400	175	235/70R22.5	750	350
225/75R17.5	400	175	255/70R22.5	750	350
235/75R17.5	400	175	265/70R22.5	750	350
245/75R17.5	400	175	275/70R22.5	750	350
195/70R17.5	400	175	305/70R22.5	900	425
215/70R17.5	400	175	315/70R22.5	900	425
235/70R17.5	400	175	365/70R22.5	900	425
195/60R17.5	400	175	365/65R22.5	900	425
205/60R17.5	400	175	385/65R22.5	1000	475
225/60R17.5	400	175	425/65R22.5	1000	475
19.5" tyres			285/60R22.5	750	350
280/75R19.5	500	250	295/60R22.5	750	350
285/75R19.5	500	250	305/60R22.5	750	350
225/70R19.5	400	175	315/60R22.5	750	350
245/70R19.5	400	175	385/55R22.5	1000	475
265/70R19.5	500	250	455/55R22.5	1000	475
275/70R19.5	500	250	275/50R22.5	750	350
285/70R19.5	500	250	445/50R22.5	1000	475
305/70R19.5	750	350			

If the balancing result isn't satisfactory, add more balancing beads. A highly imbalanced tyre will not be balanced with the recommended amount of balancing beads.

INSTALLING THE STEYRTEK TYRE BALANCING BEADS

- Mount one side of the tyre on a wheel
- Check the required amount of tyre balancing beads according to the size of your tyre
- Pour the beads inside the tyre
- Mount the other side of the tyre on the wheel and fill the tyre up to the correct pressure with dry pressure air
- Your tyre is now ready to be installed on a vehicle!

